

users guide

Buccaneer GTE

Your Ideal users guide

GTE 4, GTE 5, GTE 6 & Combination Boilers

When replacing any part on this appliance use only spare parts that you can be assured conform to the safety and performance specification that we require. Do not use reconditioned or copy parts that have not been clearly authorised by Ideal Boilers.


 **BOILERS**
Ideal
ENGINEERED FOR PEACE OF MIND

Buccaneer GTE

(Gas and Fuel Oil)

PI No. 0049 BM 3528

Destination Countries: GB, IE

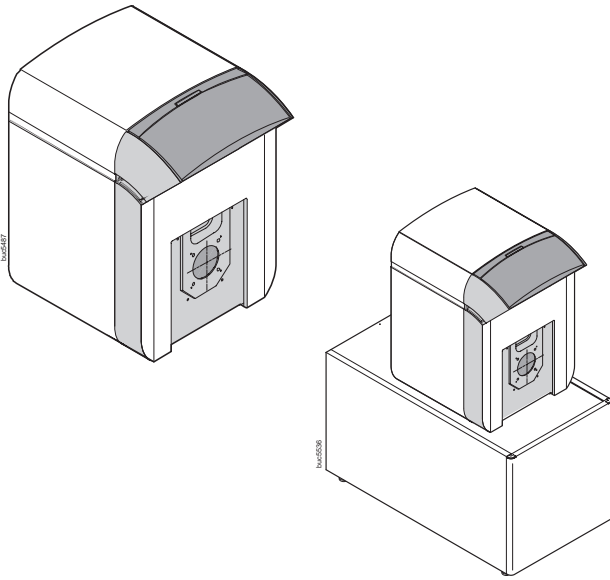

Important Notes

- If the boiler is installed in a compartment then the compartment **MUST NOT** be used for storage purposes.
- Do not store objects around or on the boiler, and keep access clear at all times.
- Do not obstruct ventilation ducts, grilles or openings in the boiler room, room space or compartment that the appliance is installed in, or the passage of combustion and ventilation air to the boiler.
- Do not turn off the boiler if it is to be left unattended in frosty weather.
- If it is known or suspected that a fault exists on the boiler then it **MUST NOT BE USED** until the fault has been corrected by a recognised installer (CORGI registered for gas-fired boilers).
- Flammable materials must not be placed in close proximity to the appliance. Materials giving off flammable vapours must not be stored in the same room as the appliance.

In cases of repeated or continuous shutdown, a recognised installer (CORGI registered for gas-fired boilers) should be called to investigate and rectify the condition causing this and carry out an operational test after each intervention on the device. Only the manufacturers original parts should be used for replacement.

INTRODUCTION

The **Buccaneer GTE** is a floor-standing boiler featuring full sequence automatic gas or fuel oil burner.

SAFETY

It is essential that the instructions in this booklet are strictly followed, for safe and economical operation of the boiler.

FOR GAS FIRED BOILERS

Current Gas Safety (Installation & Use) Regulations or rules in force.

In your own interest, and that of safety, it is the law that this boiler must be installed and maintained by a CORGI registered installer, in accordance with the above regulations.

The appliance should be serviced at least once a year by a CORGI registered installer.

Electricity Supply

The appliance must be earthed.

Supply 230 V - 50 Hz.

This appliance is intended to be connected to the supply via a double-pole switch, having a 3mm contact separation in both poles, serving only the boiler and system controls. Alternatively, a 3-pin UNSWITCHED socket may be used.

Minimum Clearances

Clearances of **500mm (20")** at the rear, **500mm (20")** at the sides and **1000mm (40")** at the front of the boiler casing must be allowed for servicing.

To Light the Boiler (Refer to Frame 1)

1. CHECK THAT THE ELECTRICITY SUPPLY TO THE BOILER IS OFF.
2. Set the boiler on/off switch (1) to off.
3. Set the boiler flow control (7) and DHW temperature control (10) to maximum.
4. Switch on the electricity supply to the boiler and check that all external controls, e.g. programmer, room thermostat etc. are on and the Summer/Winter switch (3) is set to Winter.
5. Set the boiler on/off switch (1) to ON.

The boiler will commence the ignition sequence, supplying heat to the system when required.

Note. *If the burner does not ignite refer to the burner instructions.*

6. Set the boiler flow control (7) and DHW temperature control (10) (combination boilers or if optional DHW sensor fitted), to the desired settings.

Settings below 4 (approx. 40°C) are not recommended, in order to avoid the risk of combustion products condensing on the walls of the boiler.

7. Burner


Refer to the instructions supplied with the burner for specific control features.

All CORGI Registered Installers carry a CORGI ID card, and have a registration number. Both should be recorded in your Log Book. You can check your installer by calling CORGI direct on 0156 372 300.

CAUTION. To avoid the possibility of injury during the installation, servicing or cleaning of this appliance care should be taken when handling edges of sheet steel components

1 BOILER CONTROLS / DISPLAY

1 Boiler on/off switch


Position  ON Position  OFF

2. Alarm light

Comes on when the burner is in safety lockout

3. Summer/Winter switch

Winter  Start the heating pump

Summer  The heating pump stops 12 minutes after the changeover to summer mode.

4. Test-STB button

When held in the pressed position it tests the safety thermostat and cuts off the pump(s)

5. Safety thermostat (with manual reset) Set to 110°C


6. Timed circuit breaker (4A)

7. Electronic thermostat

Adjustment of the boiler flow temperature

8. Light on

Indicates the display above it is showing the boiler flow temperature

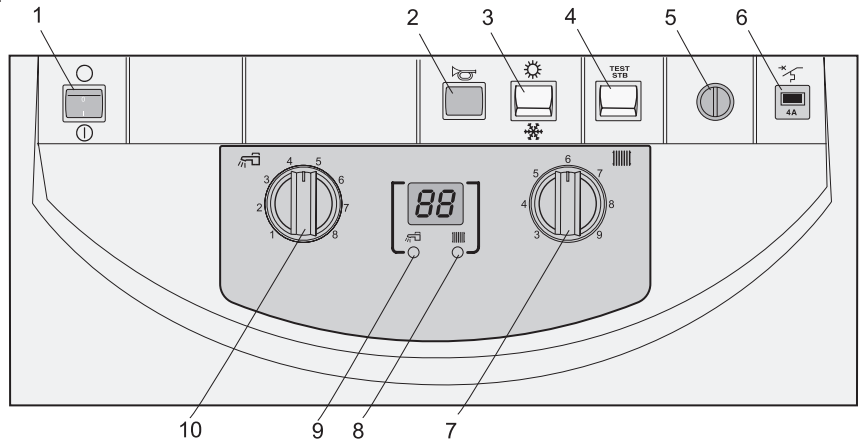

Bucc 6095

DOMESTIC HOT WATER

(combination boilers or those fitted with a DHW sensor)

Items 9 & 10 only.

9. Light on

Indicates the display above it is showing the DHW temperature.

10. Electronic thermostat

Adjustment of the average DHW storage temperature

Notes for items 9 & 10 only.

Combination boilers or those fitted with a DHW sensor. When the system is switched on it performs an air elimination sequence of the hot water calorifier lasting for 1 minute, by intermittently operating the DHW load pump and the CH pump. This air elimination sequence is de-activated if the calorifier temperature is more than 25°C

Summer/Winter Switch. If DHW has been in demand, a delay of approx. 1 minute will occur for the change from the DHW pump to the CH pump, after the changeover to Winter mode.

2 CONTROL OF WATER TEMPERATURES

The water temperature may be controlled by the following control settings:

	Ctrl. Position	Approx. Temp.
1. Boiler flow temperature (CH)	3 to 9	30°C to 90°C
2. DHW (combi boilers or those fitted with DHW sensor)	1 to 8	10°C to 80°C

Note.


In DHW mode the boiler flow temperature will automatically be controlled by the DHW temperature limiter.

Settings below positions 4 (CH) and 6 (DHW) are NOT RECOMMENDED.

3 DISPLAY FEATURES

Central Heating only


The green Heating LED illuminates and the display indicates boiler flow temperature.

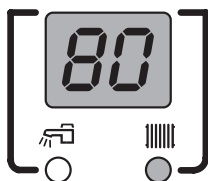


Central Heating & DHW

(combination boilers or those fitted with a DHW sensor)

Green LEDs for both boiler flow and DHW temperature illuminate alternately, as shown, and the display shows the appropriate boiler flow and DHW temperatures.

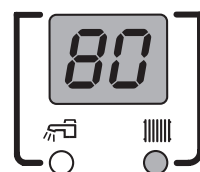

Boiler flow

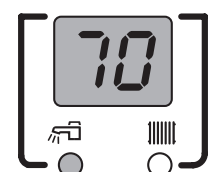

DHW temp

CONTINUED.....

4 DISPLAY FEATURES CONTINUED

MESSAGES - ALARMS The display may show the following messages in the case of a malfunction:

Message	Failure	Component	Probable Cause	Remedy	Notes
<i>RL50</i>	Installation stops	Boiler sensor	The corresponding sensor circuit is interrupted or is short circuited	Inform the installer	<i>If the power supply is interrupted with an RL52 alarm and no corrective action is taken then, when the power is resumed, the boiler will restart but continue to operate in a CH mode only and alarm RL50 will NOT be displayed.</i>
<i>RL52</i>	Installation continues to operate but DHW no longer heated	DHW sensor			
<i>RLTd</i>	No DHW	Titanium anode	The titanium anode is open circuit or the calorifier is empty	Check that the titanium anode is properly connected or fill the calorifier	The DHW may be reactivated for 24 hours by disconnecting and reconnecting the power supply to the boiler. If the titanium anode is faulty the calorifier will no longer be protected. It is therefore absolutely vital to inform the installer or engineer in charge of maintaining the boiler. If the calorifier is not fitted with a titanium anode check that the connector supplied in the AD 212 kit, which has a 220ohm resistance and a 100nF capacitor fitted, is correctly connected to terminals 25 and 26.
<i>RLTc</i>	No DHW	Titanium anode (see note if not fitted)	The titanium anode has a short circuit or the connections are wrong (+ve to -ve or vice versa)	Check that there is no short circuit or the connections are made correctly	

To Shut Down the Boiler

1. For short periods

Set the boiler on/off switch (1) to OFF.

2. For longer periods

Set the boiler on/off switch (1) to OFF. Switch the electricity supply to OFF. For longer periods the entire system should be drained, including the domestic hot water supply.

To Relight the Boiler

Refill the system if it has been drained, taking care to ensure no air is in the boiler or system.

Repeat the procedure detailed in 'To light the boiler'.

Frost Protection

If frost is likely, leave the boiler thermostat at a reduced temperature setting. Ensure external controls allow the boiler to operate if necessary. Note that this may not protect remote parts of the system, in which case a separate frost thermostat should be fitted or the system drained and the boiler shut down, as for Long Periods.

Boiler Overheat Thermostat

Boiler overheating is detected by the overheat thermostat connected to the boiler control module. If the boiler overheats, it will shut down the burner but the circulating pump will continue to run. The display may show *RL50* until the water cools. Press the safety thermostat reset button, under the screw top cap (5), and the burner will relight. If the fault recurs, turn off the boiler and consult a recognised installer (CORGI registered for gas-fired boilers.)

Escape of Gas

Should a gas leak or fault be suspected contact your local gas supplier without delay.

Do NOT search for gas leaks with a naked flame.

Cleaning

For normal cleaning simply dust with a dry cloth.

To remove stubborn marks and stains use a damp cloth and mild detergent.

DO NOT use abrasive cleaning materials.

Caradon Ideal Limited pursues a policy of continuing improvement in the design and performance of its products. The right is therefore reserved to vary specification without notice.

Ideal Boilers, P.O. Box 103, National Ave, Kingston upon Hull, HU5 4JN. Telephone: 01482 492 251 Fax: 01482 448 858. Registration No. London 322 137.



BOILERS
Ideal
ENGINEERED FOR PEACE OF MIND

April 2005

159 181 A02

Caradon
Ideal Limited

Ideal Consumer Helpline Tel: 01482 498 376
www.idealboilers.com