These instructions must be read in conjunction with the Installation & Servicing Instructions supplied with the boiler.


NOTE. For appliance outputs from 715kW, two sealed system kits will be required. Each kit to be fitted to the Master and Slave Modules.

INSTALLING THE SEALED SYSTEM KIT

- 1. Screw the manifold onto the Flow manifold provided with the boiler.
- 2. The 2" outlet thread has been left for the installer to connect an appropriately sized expansion vessel for the system it is connected to.

NOTE.

When fitting the gas pipe ensure it does not conflict with the Sealed System Kit.

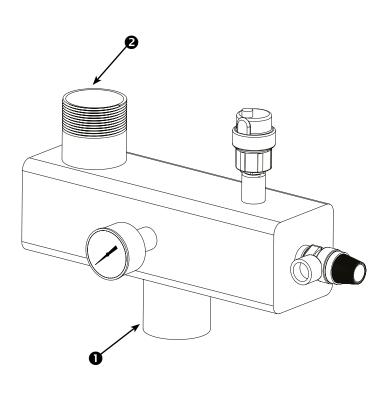

Ideal Boilers Ltd., P.O. Box 103, National Avenue, Kingston upon Hull, HU5 4JN. Telephone: 01482 492 251 Fax: 01482 448 858. Registration No. London 322 137.

March 2015 UIN 213971 A03



Ideal Boilers Ltd. pursues a policy of continuing improvement in the design and performance of its products. The right is therefore reserved to vary specification without notice.