

# ROOM SEALED AIR INLET KIT

Imax Xtra EL 320 - 620

**These instructions must be read in conjunction with the Installation & Servicing Instructions supplied with the boiler.**

**NOTE.** For appliance outputs from 715kW, use the Room Sealed air inlet header kit.

This Room Sealed Air Inlet Kit (Flue Type C53) allows the installer to draw air from outside the building. This is recommended when the room in which the boiler is situated is subject to high amounts of dust / contamination.

## KIT CONTENTS

- Air Inlet Spigot
- Air inlet Spigot Gasket



## INSTALLING THE ROOM SEALED AIR INLET KIT

1. Remove the boiler front panel and control pod (refer to Installation Instructions).
2. Remove Locking Bracket at rear of boiler and Top infill panel.
3. Remove both front side panels (refer to Installation Instructions).
4. Remove the two screws that secure the painted top panel.
5. Remove air inlet grille (retain the screws to fix the Air Inlet Spigot).
6. Fit gasket to the spigot.
7. Fit the Air Inlet Spigot to the boiler by securing with three screws from the air inlet grille.
8. Refit all panels in reverse order.
9. Using a standard 200mm air duct (not provided), connect the air to an appropriate outside wall ensuring it is suitably terminated with a grille to prevent entry of vermin.

