INDIRECT TEMPLATE

USE THIS SIDE FOR MODELS i305, i405, i505, i605 & i705.
SEE INSTALLATION INSTRUCTIONS FOR FULL DETAILS ON HANGING THE APPLIANCE.
FOR DOWNWARD PIPING INSTALLATIONS REMOVE AND ROTATE HOSE TAILS PRIOR TO MOUNTNG. REPLACE FIBRE GASKETS WITH SPARES PROVIDED.

MASONRY WALL: DRILL 4 HOLES Ø12 X 70mm IN POSITIONS SHOWN (2 IN TOP BRACKET, 2 IN LOWER BRACKET).
SECURE USING PLUGS AND SCREWS PROVIDED. NOT SUITABLE FOR SOLID BRICK

NON MASONRY WALL: ENSURE WALL IS CAPABLE OF SUPPORTING THE WEIGHT OF THE APPLIANCE. USE SUITABLE FIXINGS. DISCARD THOSE SUPPLIED.

CHECK BRACKET POSITIONS BEFORE MOUNTING APPLIANCE.

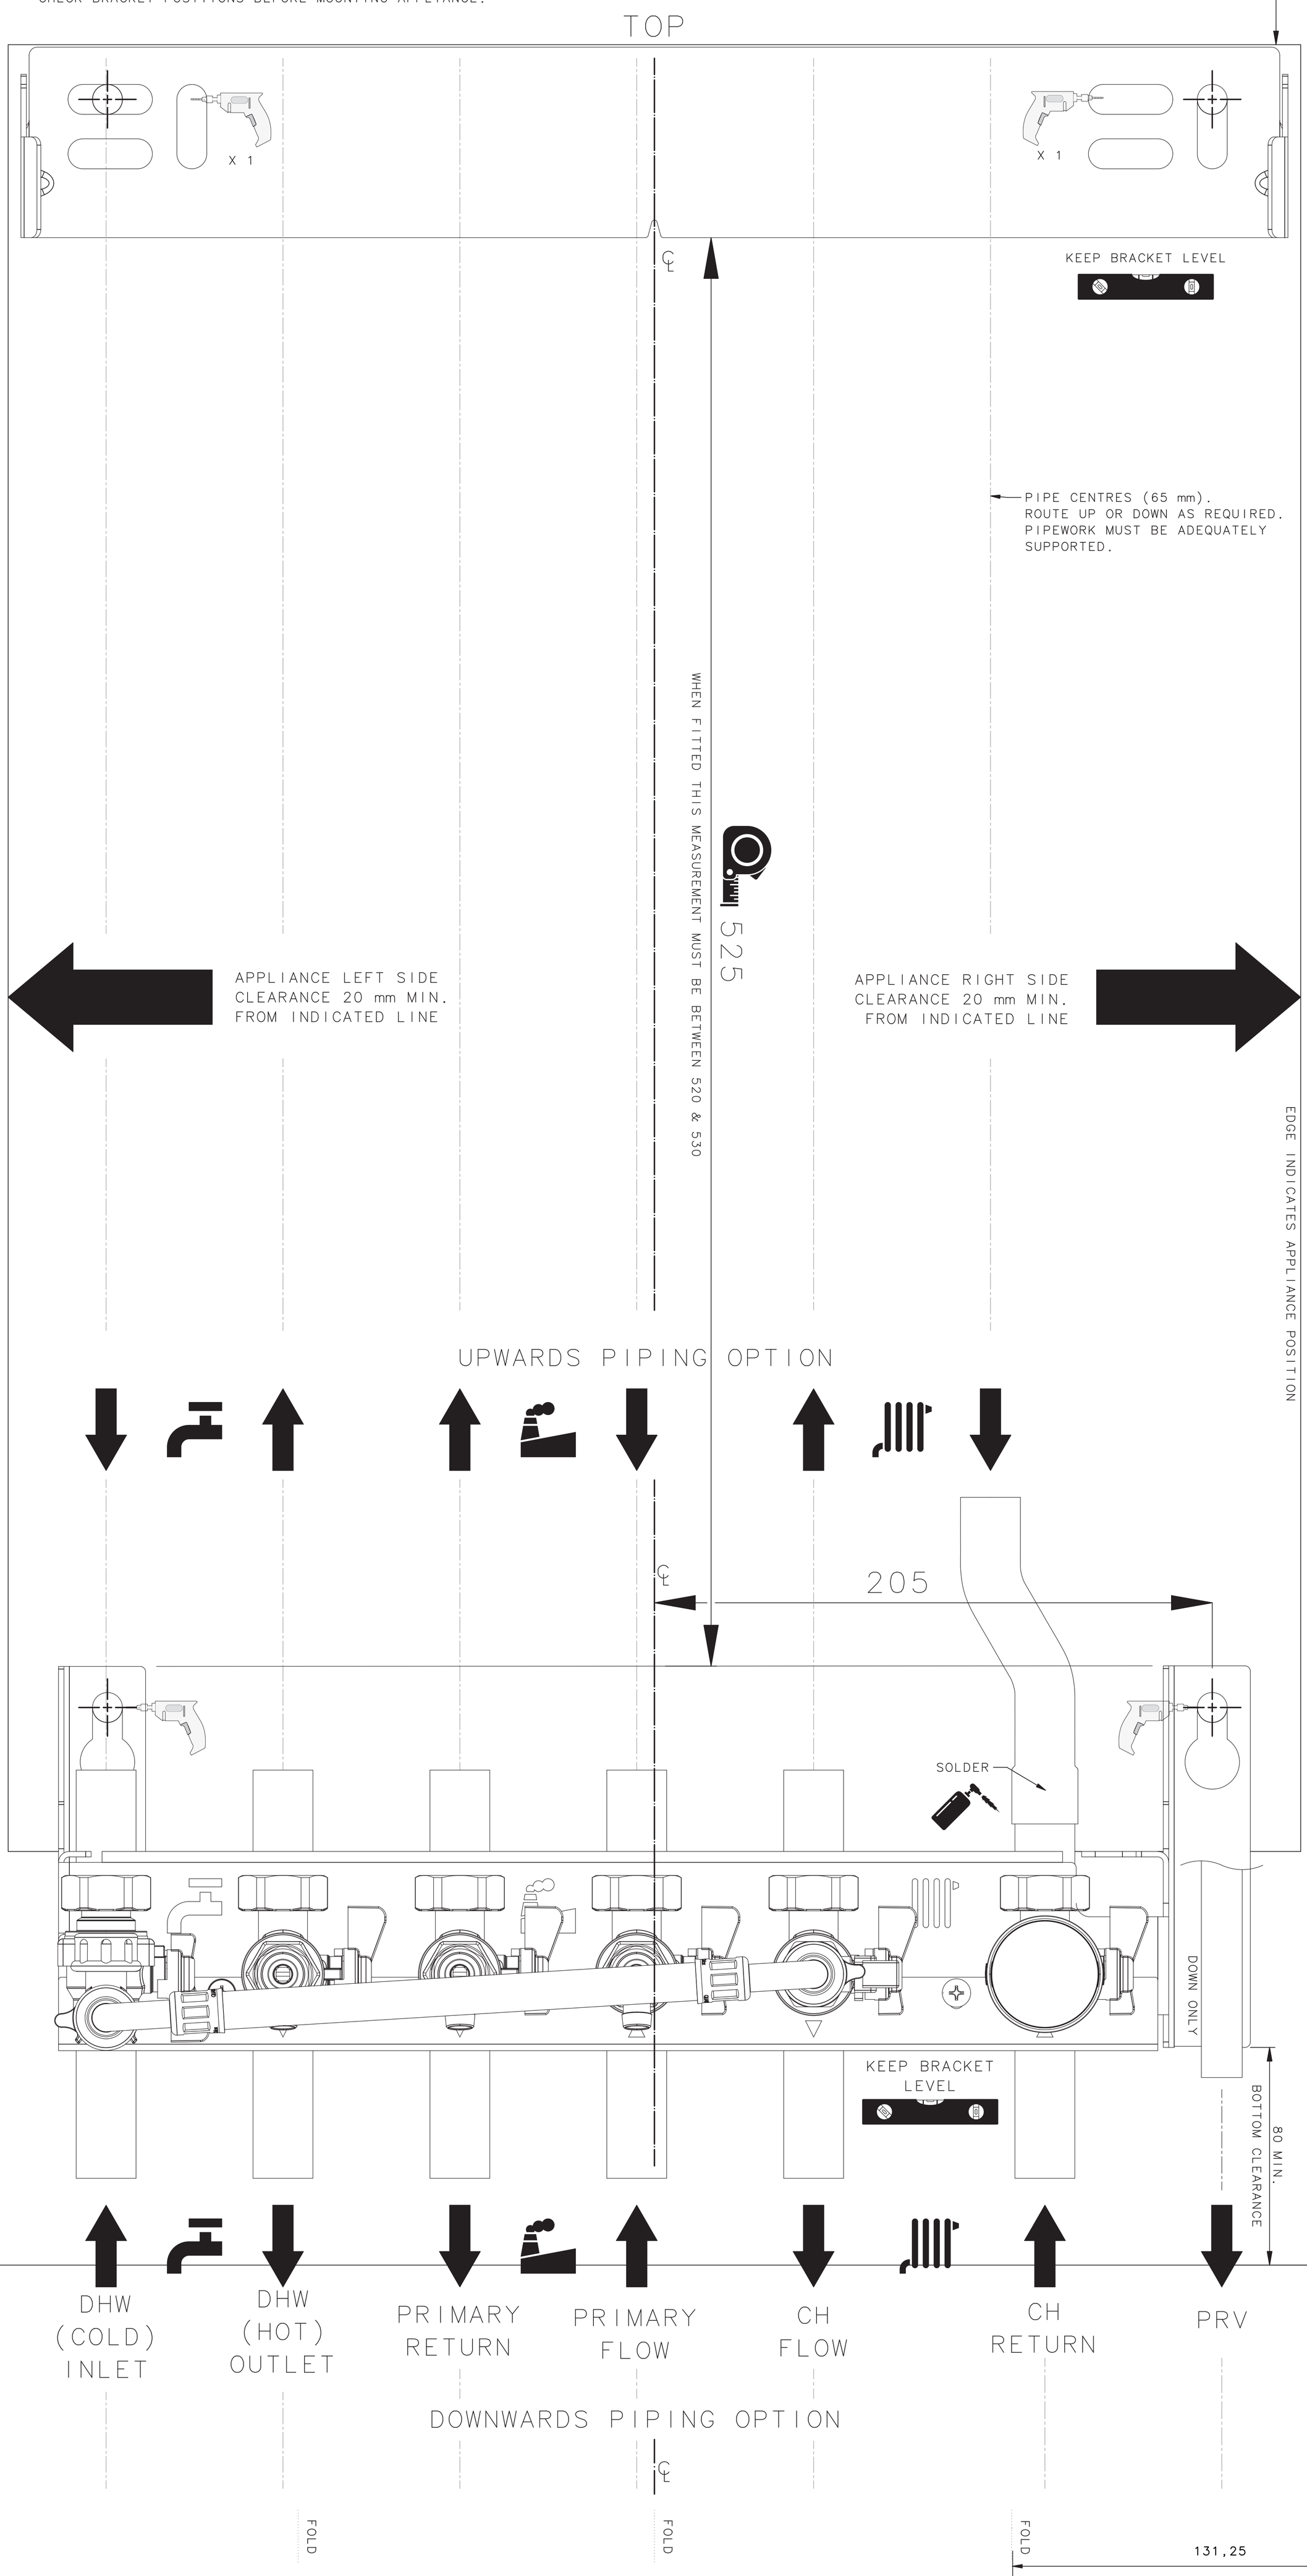

DIRECT TEMPLATE

USE THIS SIDE FOR MODELS D30, D40, D50 & D60.
SEE INSTALLATION INSTRUCTIONS FOR FULL DETAILS ON HANGING THE APPLIANCE.
FOR DOWNWARD PIPING INSTALLATIONS REMOVE AND ROTATE HOSE TAILS PRIOR TO MOUNTNG. REPLACE FIBRE GASKETS WITH SPARES PROVIDED.

MASONRY WALL: DRILL 4 HOLES Ø12 X 70mm IN POSITIONS SHOWN (2 IN TOP BRACKET, 2 IN LOWER BRACKET).
SECURE USING PLUGS AND SCREWS PROVIDED. NOT SUITABLE FOR SOLID BRICK

NON MASONRY WALL: ENSURE WALL IS CAPABLE OF SUPPORTING THE WEIGHT OF THE APPLIANCE. USE SUITABLE FIXINGS. DISCARD THOSE SUPPLIED.

CHECK BRACKET POSITIONS BEFORE MOUNTING APPLIANCE.