

IMMERSION SENSOR KIT INSTRUCTIONS

IMAX XTRA 2 80 120 160 200 240 280 80P 120P 160P 200P 240P

When replacing any part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require. Do not use reconditioned or copy parts that have not been clearly authorised by Ideal Heating. For the very latest copy of literature for specification and maintenance practices visit our website idealheating.com where you can download the relevant information in PDF format.





INSTRUCTIONS

CONTENTS

1.3

1.1	Introduction	. 3
1.2	Immersion Sensor Kit Parts	. 3

Connecting the Hot Water Cylinder Sensor......4


1.1 INTRODUCTION


The following document provides instructions on how to fit the Imax Xtra 2 Immersion Sensor Kit for temperature measurement of a Hot Water Cylinder.

1.2 IMMERSION SENSOR KIT PARTS

The kits consist of the following parts:

- Immersion Sensor Thermostat Pocket Sensor Retention Clamp - Shown in Fig. 1.
- 2. Sensors Connector Kit Shown in Fig. 2.

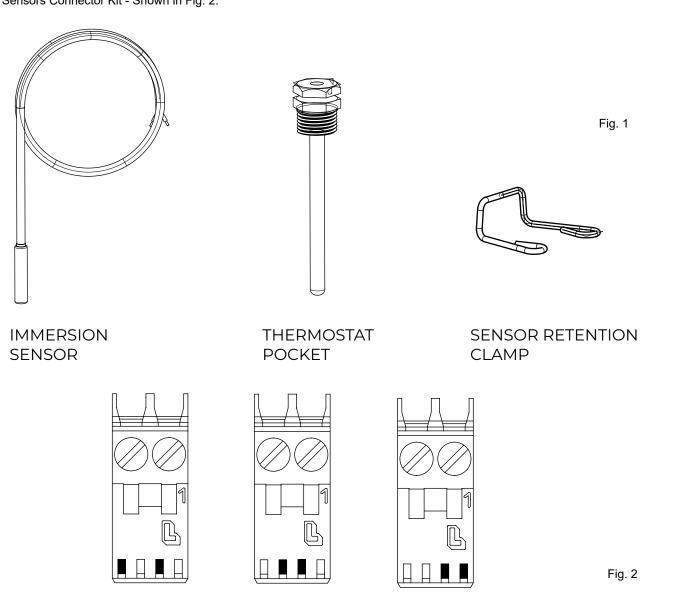

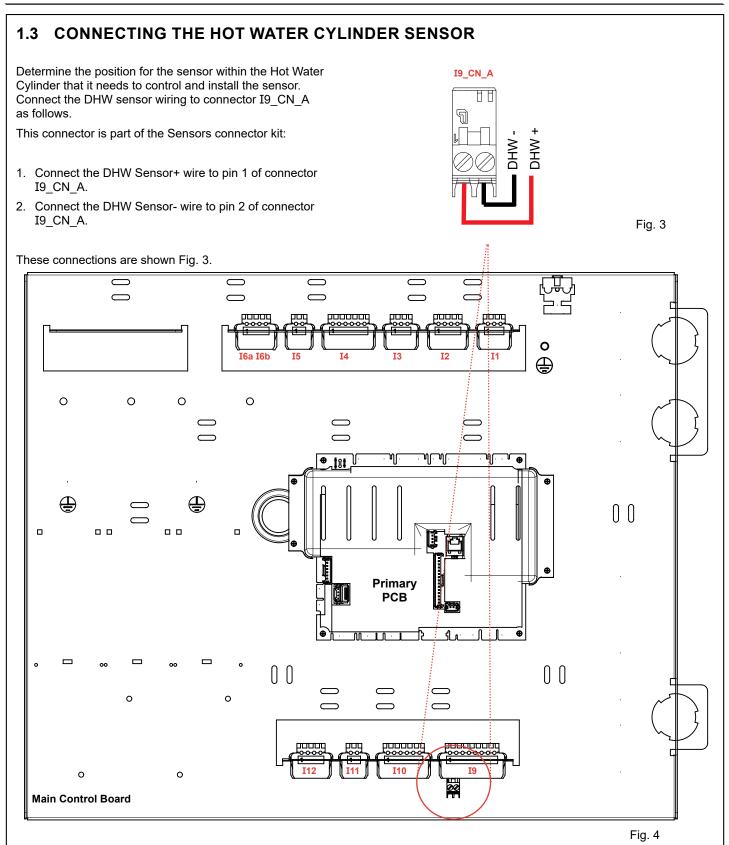


Insert connector I9_CN_A into Installer connector I9, as shown in Fig. 4.

Refer to the boiler manual for cable routing into the boiler. Secure the cables with existing cable retention clamps or cable tie slots that are on the boiler main control panel. Ensure that isolation is maintained relative to 240V wiring. The boiler will automatically configure for immersion sensor control when it is powered up again. Configuration of the sensor to the boiler occurs during the configuration process described in the boiler manual.



WEEE DIRECTIVE 2012/19/EC Waste Electrical and Electronic Equipment Directive

- At the end of the product life, dispose of the packaging and product in a corresponding recycle centre.
- Do not dispose of the unit with the usual domestic refuse.
- Do not burn the product
- · Remove the batteries
- Dispose of the batteries according to the local statutory requirements and not with the usual domestic refuse.

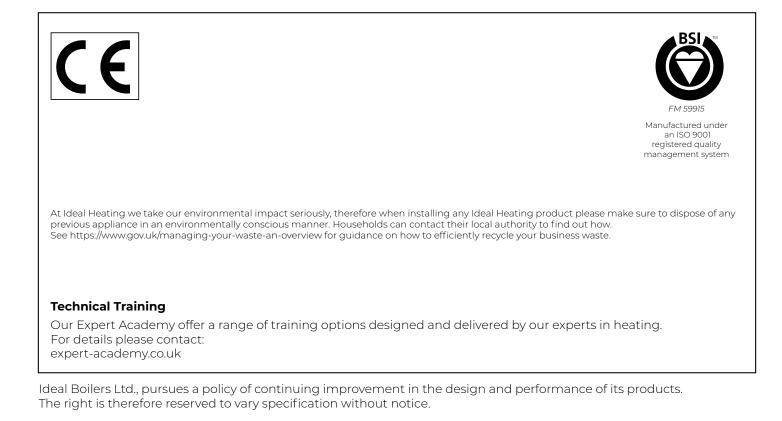

Ideal is a trademark of Ideal Boilers. Registered Office Ideal Boilers Ltd., National Avenue, Hull, East Yorkshire, HU5 4JB Tel 01482 492251 Fax 01482 448858 Registration No. London 322 137

Ideal Commercial Technical Helpline: 01482 498376 Ideal Parts: 01482 498665

idealheating.com

